

Update software of touchscreen (main module)

IMPORTANT NOTE

Check the type of software you are going to install before starting the process. ICCP and ICAF systems use different types of software. Software file (ALF-format) look the same from the outside.

To update the software of the CORROSION touchscreen, the following items are required:

- One SD-card, formatted with the FAT16 file system and loaded with the new software file for the touchscreen.
- Rittal cabinet key to open the power unit.

Please follow the next steps:

1. Switch off the ICAF or ICCP system
2. Insert the SD-card with the software into the card slot at the back of the main module.
3. Switch on the ICAF or ICCP system.

The system will now automatically update the software and when this is done the screen states "Please remove SD-Card".

4. Remove the SD-card from the card slot.

The system will now automatically reboot with the new software in effect. All previous user- and system settings will be preserved. During the start-up of the system, the actual software version is displayed in the screen (e.g. 2.10.3).